

**EN 60598-2-1 (IEC 60598-2-1)**

**1) Fissare il supporto alla parete.**

Fasten the support to the wall.  
Fixer le support au mur.  
Der Halter an die Wand feststellen.

**2) Inserire i conduttori a fondo negli appositi fori del portalampade (dopo aver attorcigliato i trefoli).**

Twist the stands and connect the conductors inside the suitable holes of the lampholder.



Après avoir tortillé les torons, insérer les conducteurs au fonds dans les propres trous de la douille.

Die Leiter in die passenden Fassungsloecher tief einsetzen, nachdem dei Litzen aufgewickelt worden sind.

**3) Agganciare a scatto (con cura) il portalampade al supporto.**

Click connect (carefully) the lampholder to the support.

Accrocher à "click" (avec soin) la douille au support.  
Die Fassung in den Halter (sorgfaeltig) einstecken

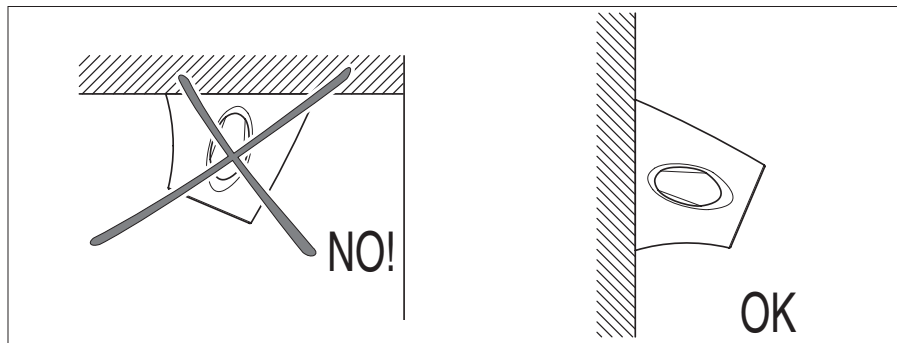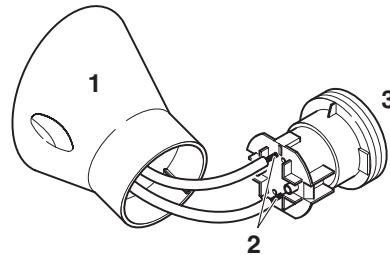

**InfoTECH**

ITALY	WORLDWIDE
Numero Verde	ScameOnLine
800-018009	www.scame.com
	infotech@scame.com

**EN 60598-2-1 (IEC 60598-2-1)**

**1) Fissare il supporto alla parete.**

Fasten the support to the wall.  
Fixer le support au mur.  
Der Halter an die Wand feststellen.

**2) Inserire i conduttori a fondo negli appositi fori del portalampade (dopo aver attorcigliato i trefoli).**

Twist the stands and connect the conductors inside the suitable holes of the lampholder.



Après avoir tortillé les torons, insérer les conducteurs au fonds dans les propres trous de la douille.

Die Leiter in die passenden Fassungsloecher tief einsetzen, nachdem dei Litzen aufgewickelt worden sind.

**3) Agganciare a scatto (con cura) il portalampade al supporto.**

Click connect (carefully) the lampholder to the support.

Accrocher à "click" (avec soin) la douille au support.  
Die Fassung in den Halter (sorgfaeltig) einstecken

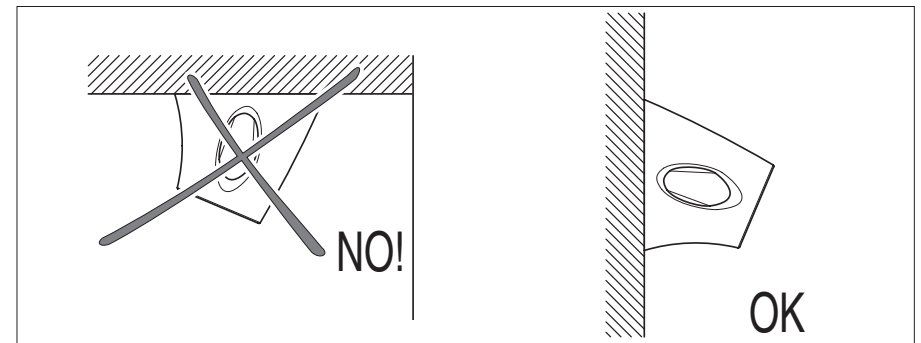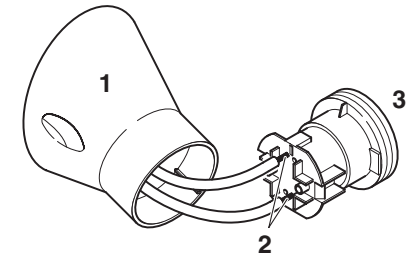

**InfoTECH**

ITALY	WORLDWIDE
Numero Verde	ScameOnLine
800-018009	www.scame.com
	infotech@scame.com