


6	SOCKET CASING	31563-0010	1	
5	IP2X PHASE PIN CAL.18	12797-5000		
	IP2X PHASE PIN CAL.16	12948-5000		
	IP2X PHASE PIN CAL.14	12476-5000		
4	3+E IP2X MALE PIN CONTACT CARRIER	31175-0000	1	
3	CABLE TERMINAL TO CRIMP OR SOLDER 185 ²	13237-0110		32
	CABLE TERMINAL TO CRIMP OR SOLDER 150 ²	11993-0110		35
	CABLE TERMINAL TO CRIMP OR SOLDER 120 ²	11284-0110		35
	CABLE TERMINAL TO CRIMP OR SOLDER 95 ²	11146-0110		32
2	AUXILIARY FEMALE CONTACT CAL.6	11136-5000	2	19
1	EARTH FEMALE CONTACT CAL.14	11132-5000	1	
Ind	Description	Reference	Cont.	Strip. A

ASSEMBLY INSTRUCTIONS

- 1- PREPARE THE CABLES AS SCHEME BELOW.
- 2- CRIMP OR SOLDER CABLE TERMINALS (3) ON PHASE CABLES AND EARTH CABLE [TOOL Nr 5 AND 6].
- 3- UNSCREW FLANGE (6.2) [TOOL Nr 3] THEN SLIDE IT OVER THE CABLE WITH SHOULDER SIDE TO THE FRONT. SLIDE SEAL (6.1) OVER THE CABLE TOO.
- 4- ENGAGE EARTH CONTACT (1) IN THE HOLE OF EARTH EAR IN THE MIDDLE OF SOCKET CASING(6).
- 5- PLACE CABLE TERMINAL (3) OF EARTH CABLE AT THE BACKSIDE OF EARTH CONTACT (1), SCREW CONTACT, WHEN CABLE TERMINAL HEXAGON TOUCH EARTH EAR OF SOCKET CASING (6), PUSH IT INSIDE OF EARTH EAR TO BLOCK IT, THEN TIGHTEN CONTACT (1) (TORQUE 20Nm) [TOOL Nr 1 AND 2].
- 6- REMOVE SCREWS OF CONTACTS (2) [TOOL Nr 4], INTRODUCE CONTACTS IN FRONT OF IP2X PHASE MALE PIN (4). INTRODUCE PILOT CABLES IN BACKSIDE OF CONTACTS AND PUT SCREW IN CONTACTS THEN TIGHTEN [TOOL Nr 4].
- 7- INTRODUCE EACH CABLE TERMINAL (3) AT THE BACKSIDE OF IP2X PHASE MALE PIN (4), HEXAGON OF CABLE TERMINAL MUST CORRESPOND WITH HEXAGON INSIDE OF THE IP2X PHASE MALE PIN, THEN SCREW CONTACTS (5) IN THE FRONT OF IP2X PHASE MALE PIN (TORQUE 20Nm) [TOOL Nr 1 AND 2].
- 8- INTRODUCE IP2X PHASE MALE PIN (4) IN THE SOCKET CASING (6) AND FIX FLANGE (6.2) [TOOL Nr 3].
- 9- PLACE SEAL (6.1) AT THE BACKSIDE OF SOCKET CASING (6).

LIST OF TOOLS *

- 1- TORQUE WRENCH FACOM REF. J.306A50
- 2- SOCKETS FACOM : 3/8" N°21 REF: J.21
3/8" N°19 REF: J.19LA
3/8" N°17 REF: J.17LA
- 3- ANGLED SOCKET WRENCH OR OPEN END WRENCH 13mm
- 4- FLAT SCREWDRIVER Nr 3
- 5- CRIMPING TOOL KLAUKE HK 120 U
- 6- KLAUKE CRIMPING JAW: 95° REF: HNFF 13/95
120° REF: HNFF 13/120
150° REF: HNFF 13/150
185° REF: HNFF 13/185

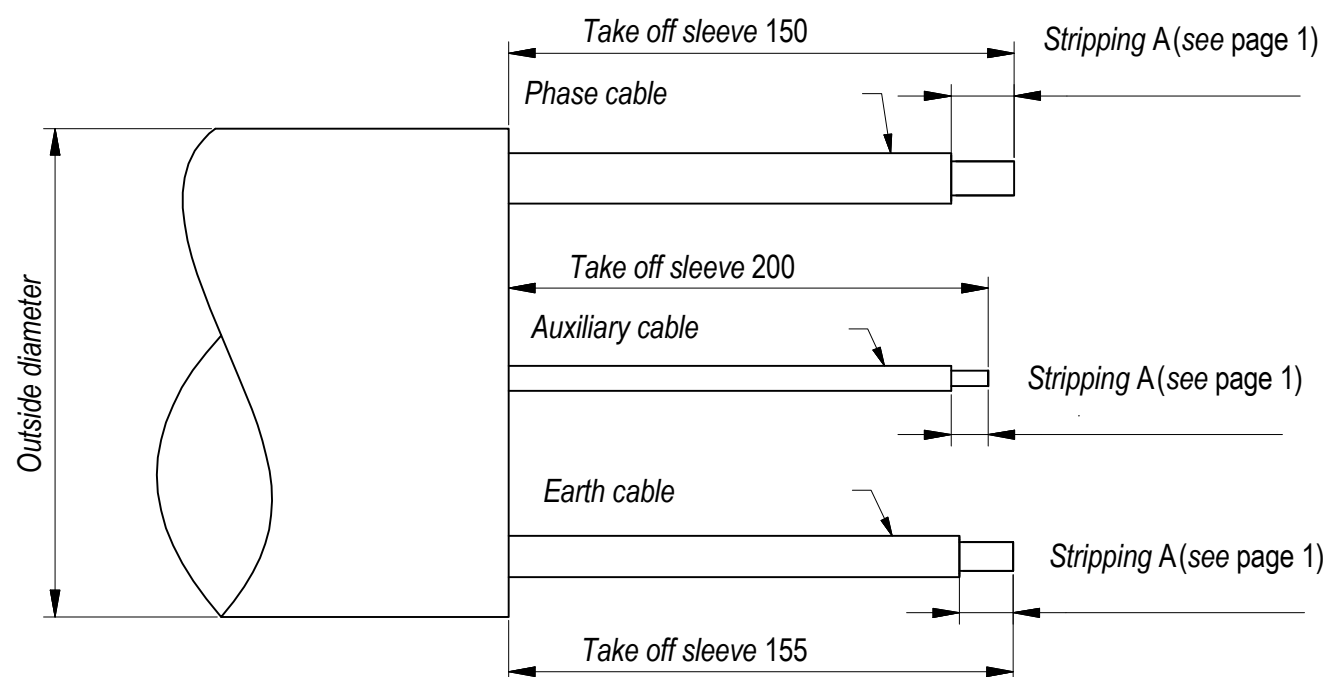

* TOOL REFERENCES ARE ONLY RECOMMENDED AND GIVEN AS EXAMPLES. TOOLS ARE NOT PROVIDED OR IMPOSED BY SCAME.

SCAME

S.p.A.

PARRE - (Bergamo)

zp90982-28-1_mp39417